


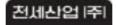

# Digital pH/ORP Controller

# **MESTAR+ Series**

**Instruction Manual** 



Thank you very much for purchasing cheonsei pH/ORP controller.

Before beginning operation, please read this instruction manual carefully.

Correct handling, repair & maintenance are described easily.

Please keep this instruction manual at the place where you can see it easily.

- \*The specification of products can be changed for improvement without prior notice.
- \*\*Please refer to the website (www.cheonsei.co.kr) as we always register the latest instruction manual.

## CONTENTS

1. Notice for Safety ······	3
2. Product Confirmation ·····	4
3. Genaral	4
4. Model Code	5
5. Specifications ·····	5
6. SET Components ·····	6
7. Name & Function of Each Part	7
8. Calibration ·····	8
9. Settings & Operating	13
10. Communication Protocol · · · · · · · · · · · · · · · · · · ·	26
11. System Diagram ·····	34
12. Handling of Component	35
13. Cause & Solution of Problem	39
14. Warranty ·····	40
15. Repair Service	41
16. Controller Wiring	41
17. Controller Dimension	42
18 Controller Installation	45

## 1 Notice for Safety

#### 1-1 Introduction

- To use the products safely, the signs are showed on the manual like below.
- · As it is a matter of safety, please be sure to keep the directions in manual
- · The signs and indication are as follows.

## **▲** Warning

Person death or serious injury will be occurred, if warning is not kept by wrong handling.



Person injury or property damage will be occurred, if caution is not kept by wrong handling.

#### 1-2 Cautions for operation condition

## **▲** Caution

• Do not use this controller and its components for other purposes.

Otherwise it may cause trouble.

• Please keep the followings, otherwise it may cause trouble.

Ambient temperature :  $-5 \sim 45^{\circ}$ C / Relative humidity : below 80%

Install location: Indoor and inside of electrical panel

Temperature of the handling liquid

- : below the working temperature described in the electrode specification
- Gas or moisture, which occur in jobsite, can lead to the internal corrosion of the controller and it may cause reduction of service life and trouble.

## 1-3 Warning for handling condition

## **A** Warning

- Install this controller beyond the reach of children and/or unauthorized person.
- Turn off the power and stop the controller & other equipments when repairing or disassembling the controller. If power is on during work, it may cause electric shock.
- Controller should be properly grounded and install ELCB(Earth Leakage Circuit Breaker) in order to prevent electric shock.
- In case of installation in the electric panel, install the controller after securing sufficient space in order not to contact with the components inside electric panel.
- Do not touch with wet hands. Electric shock may occur.
- Use only designated parts. If undesignated parts are used to the controller, it may cause accident & trouble.
- Do not arbitrarily reconstruct the controller. If the controller is arbitrarily reconstructed, it may cause accident & trouble.

## ▲ Caution

• Do not use the controller of which case was damaged.

If the controller is used, it may cause trouble to equipment connected with the controller,

- Do not install controller in the heavy moist or dusty place.
  - Electric shock and trouble may occur.
- Do not use power other than that specified in controller.
  - Otherwise, it may cause malfunction or fire.
- Refrain from voltage withstand test in order to prevent damage of internal parts.
- Dispose of waste controller in accordance with related national law.

## 2 Product Confirmation

#### 2-1 Check point when unpacking

Please check following points immediately after receiving the product.

If the defect is found from the product, please request it to local agent or CHEONSEI.

- ① Is specification correct as ordered?
- ② Is there any missing parts?
- ③ Is there any visible damage caused by vibration or shock during transport?
- (4) Is there any loosened bolt or nut?

### 2-2 Components

- ① Controller
  - Digital pH/ORP controller : 1Set
  - Bracket(SPC-1 M4 x 52) : 2EA
  - User manual: 1 Copy
- ② SET Components
  - · Refer to section 6.

## ${\it 3}$ General

This controller is a digital controller built-in micro processor. It can be used by composing circuit with the external devices through dry contact of analog input & output and, as option, it can be composed according to wanted using condition by installing communication card.

This controller is designed only for a high insulation shielded cable.

If you need to extend the electrode cable, refrain from using the general cable in market and use our high insulation shielded cable.

## 4 Model Code

MESTAR+	P			_		
	1	2	3		4	-

① Controller	② Controller Option	③ Output	④ Electrode	
	B: Standard	0 : Standard	0 : None	
	T: Temp. Compensation	1 : Temp. (4~20mA)	1 : CPP21	7: CPP12
P:pH/ORP	C: Communication(RS-485)		3: CPM11	8: CPP13
P . pn/OKP	X: Temp. Compensation		4 : CPP22	9: CPP14
	+ Communication(RS-485)		6: CPP11	
	A: Antimony			

<sup>\*\*</sup>Antimony type cannot select output and electrode.(MESTAR+ PA0-0)

## **5** Specifications

## 5-1 Controller

Specification	n	Perfor	mance			
Management	pН	0.00 ~ 14.00 pH				
Measuring range & Display range	ORP	-1999 ~ +1999mV				
a Display range	Temp	-10.0°C ~ 100°C				
D 1 ()	pН	0.01pH / 0.01pH				
Resolution / Accuracy	ORP	1mV / 1mV				
Accuracy	Temp	0.1℃ / 0.5℃				
Ambient Temp. & Humidity $-5^{\circ}$ C $\sim 45^{\circ}$ C / Relative humidity : Below 8 (Must be free from condensation and de						
Range of temp, compe	nsation	0~100°C Auto(Option)/Manual				
Calibration method		2Points Calibration Auto/Manual				
Display		3" LCD Segment display (LED Backlight: White)				
	Setting	High, Low	n, Low			
Alarm output	Output	Dry contact 1a1b, Contact capacity: 3A 250VAC / 3A 28VDC				
	Deadband	Setting Range: 0.00 ~ 1.00pH / 0 ~	100mV			
	pН	0.00 ~ 14.00pH	4 20-4 inclosed autout			
Analog output	ORP	-1999 ~ +1999mV	4~20mA isolated output (Load resistance 1.000Ω)			
	Temp	-10.0 ~ 100℃(Option)	(Load resistance 1,000sz)			
Memory		EEPROM				
Communication		RS-485 2Wire Half-Dulpex(Option)				
Power		AC85 ~ 245V, 50/60Hz (Power consumption: 3W)				
Case		Anti-Static ABS				
Size & Weight		96mm * 96mm * 115mm / Approx. 450g				
Installation place		Indoor, inside electric panel				

#### 5-2 Electrode

Code	Model	Use	Measuring Range	Cable Length	Using Temp.	Body Material
1	CPP21	рН	0~12pH	5m	0~80℃	Glass
3	CPM11	ORP	0~±1999mV	5m	0~80℃	Glass
4	CPP22	pH Temp. Compensation	0~12pH	5m	0~40℃	Glass
6	CPP11	pH Replenish-free	0~14pH	5m	0~80℃	PC
7	CPP12	pH Temp. Compensation & Replenish-free	0~14pH	5m	0~80℃	PC
8	CPP13	pH Temp. Compensation & Replenish-free (HF Resistant)	0~14pH	5m	0~80℃	Glass
9	CPP14	pH Replenish-free (Flat Type)	0~13pH	5m	0~80℃	PC

# $oldsymbol{6}$ SET Components

## 6-1 Standard Components

SET Model	Components	Specification	Quantity
	Controller	Digital pH/ORP Controller	1SET
	Panel Bracket	SPC-1 M4 x 52mm	2EA
	Electrode	CPP21	1SET
	Electrode Holder	Φ34 x 1m, Material : P.P	1SET
	Bracket for Holder	Material : PVC	1SET
MESETAR+	Connection Box	Coated with Anti-Static film	1SET
PB0-1	Connection Cable	High isolated special shield cable	20m
	KCI Powder	3.3Mol/123g	1EA
	KCI Bottle	500cc, Material: P.P	1EA
	Buffer Powder	pH4, pH7	Each 2EA
	Buffer Powder Bottle	500cc, Material: P.P	2EA
	Beaker	500cc, Material: P.P	1EA


\*Some components may vary depending on the SET model.

## 6-2 Optioanl Items

- ① Connection kit and connection cable (Up to 100m) \*\*non-extendable
- ② Quinhydrone powder(for ORP)
- ③ Sampling holder

## Name & Function of Each Part

## 7-1 Screen Layout

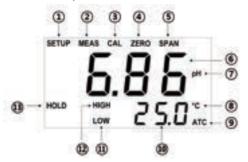


- ① Setup mode
- ② Measurement mode
- ③ Calibration mode
- 4 Zero calibration
- ⑤ Span calibration
- 6 Main display
- Main display unit

- Sub display unit
- Sub display
- ① Low alarm status
- High alarm status
- <sup>®</sup> Hold setting status

### 7-2 Key Fuction

Key	Setup mode	Measurement mode	Calibration mode
Carr	Calibration mode enter (5seconds)		Exit
menu	Return	Setup mode enter	-
	Increase	High alarm set value display (3seconds)	Increase
•	Decrease	Low alarm set value display (3seconds)	Decrease
ENTER	Select	Select	Select

#### 7-3 Rear

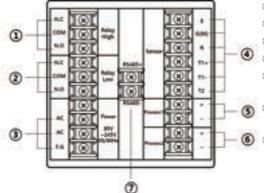

- ① Relay High: High alarm output
- ② Relay Low: Low alarm output
- ③ Power: Power supply
- 4 Sensor: Electrode connection
- ⑤ Process1: 4~20mA Analog output for 0~14pH

(ORP: -1999~+1999mV)

6 Process2: 4~20mA Analog output

for -10 ~ 100°C(Option)

⑦ Communication

: RS-485 Communication output(Option)

## $m{8}$ Calibration

#### 8-1 Calibration

This controller is Two-Point calibration type and supports auto calibration and manual calibration.

For auto calibration, neutral phosphate standard solution (pH7) for zero calibration, potassium phthalate (pH4) for span calibration, and borate (pH9) standard solution are supported.

Auto calibration is not supported for other standard solutions. In this case, use manual calibration.

\*The standard solution that can be automatically calibrated and its temperature characteristics are as follows.

Temperature	pH4 Potassium Phthalate	pH7 Neutral Phosphate	pH9 Borate
0	4.01	6.98	9.46
5	4.01	6.95	9.39
10	4.00	6.92	9.33
15	4.00	6.90	9.27
20	4.00	6.88	9.22
25	4.01	6.86	9.18
30	4.01	6.85	9.14
35	4.02	6.84	9.10
40	4.03	6.84	9.07
45	4.04	6.83	9.04
50	4.06	6.83	9.01
55	4.08	6.84	8.99
60	4.10	6.84	8.96
70	4.12	6.85	8.93
80	4.16	6.86	8.89
90	4.20	6.88	8.85
95	4.23	6.89	8.83

#### 8-2 Cautions for calibration


- ① After zero compensation, perform span compensation.
- ② In calibration mode, it does not change to measurement mode after a few minutes.

  to exit the calibration mode, should stop calibration by pressing the CAL key or complete calibration by pressing the ENTER key.
- ③ During calibration, if press CAL key to exit calibration mode or the calibration mode is exited in an unusual manner, such as power off, calibration concentrations are not saved.
- ④ Clean the electrode with clean or distilled water before submerging it or transferring it to a different standard solution.
- ⑤ For correct calibration, use it after stirring the standard solution sufficiently.
- When using cheonsei calibration powder, add 1 pack of powder to 500mL of distilled water and stir thoroughly before use.

## **▲** Warning

- Do not handle calibration powder or solution used for product calibration by children or the elderly & the infirm, since it may be harmful to the human body.
   Be sure to follow the doctor's prescription when drinking it.
- When the glass electrode is broken, it may cause serious damage to the human body.
   Be careful in handling the glass electrode an check the surface of electrode by naked eye and, if there is a crack or an damage in the electrode, do not use it an discard it.
- Be sure to wear protective gear, if the measuring liquid is harmful to the human body.

## 8-3 pH Auto calibration

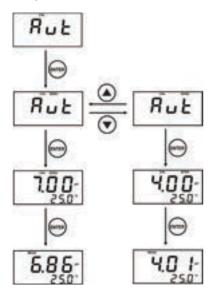


- ① Clean the electrode with distilled water.
- ② Immerse the electrode in the standard solution(Zero calibration: pH7, Span calibration: pH4 or pH9).
- ③ Wait until the controller has stabilized.(It may take up to 5 minutes)
- $\ensuremath{\textcircled{4}}$  Check that the set temperature matches the temperature of the standard solution.
  - \*If it is not matched, change the setting temperature.

(Refer to 9-9 Automatic temperature compensation setting, 9-10 Temperature measurement calibration)

- ⑤ In the measurement mode, press the CAL key for 5 seconds to enter the calibration mode.
- ⑤ Select auto calibration(Aut).
- ② Select the compensation type(ZERO, SPAN).
- ® The measured pH concentration is displayed on the main screen. (Concentration of standard solution)
- Press ENTER to complete the calibration.

\*\*If an error(E.02) occurs, check that there are no problems with the standard solution and electrode.

### 8-4 pH Manual calibration

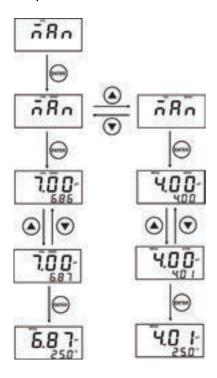


- ① Clean the electrode with distilled water.
- ② Immerse the electrode in the standard solution(Zero calibration: pH7, Span calibration: pH4 or pH9).
- ③ Wait until the controller has stabilized.(It may take up to 5 minutes)
- 4 Check that the set temperature matches the temperature of the standard solution.
   \*If it is not matched, change the setting temperature.
   (Refer to 9-9 Automatic temperature compensation setting, 9-10 Temperature measurement calibration)
- ⑤ In the measurement mode, press the CAL key for 5 seconds to enter the calibration Mode.
- ⑤ Select manual calibration(\(\bar{n}An\)).
- ② Select the compensation type(ZERO, SPAN).
- ® The measured pH concentration is displayed on the main screen. (Concentration of standard solution)
- The concentration to be corrected is displayed on the sub screen.
- ① You can use the keys(▲,▼) to change the compensation concentration.

   ※When using a standard solution not listed in the temperature characteristics table in 8-1, change it to pH concentration that corresponds to that standard solution.
- ① Press ENTER to complete the calibration.

#### 8-5 ORP Calibration

\*\*ORP calibration has already been performed prior to shipment, so no further calibration is required.

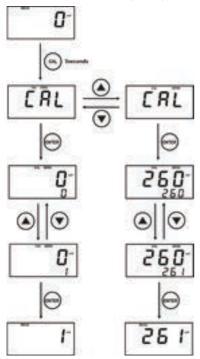

#### ■ Zero calibration

- ① Disconnect the electrode wire from the rear terminal of the controller.
- ② Short circuit between G(M) and R terminals.

#### ■ Span calibration

- ① After cleaning the electrode with distilled water, submerge it in quinhydrone solution.
- ② Wait until the controller has stabilized.(It may take up to 5 minutes)
- ③ In the measurement mode, press the CAL key for 5 seconds to enter the calibration mode.
- 4 Select the compensation type(ZERO, SPAN).
- ⑤ The measured ORP value is displayed on the main screen.
- **6** The concentration to be corrected is displayed on the sub screen.
- ② You can use the keys(▲,▼) to change the compensation value.

  (Change to ORP value provided by standard solution.)
- ® Press ENTER to complete the calibration.
  - \*In case of zero calibration, connect the electrode wire.

## $oldsymbol{\mathcal{G}}$ Setting & Functioin

### 9-1 Menu setting

You can enter setup mode by pressing the MENU key in measurement mode, and can cancel the setting or return to measurement mode by pressing MENU key in setup mode. In setup mode, if there is no an keystroke for 20 seconds, return to measurement mode without any storage of the value that is being set. ENTER key must be pressed to save the setting value. The controller supports the following 10 setting functions.

\*\*Some functions are not supported depending on the specifications or settings of the controller.

#### 9-2 Menu configurations



9-3 Alarm setting(Relay)

It sets the operation value of High, Low alarm.

After setting the high alarm, you can set the low alarm.

Default: high 9.00pH, Low 4.00pH / High +400mV, Low -400mV



9-4 Deadband setting

It sets the range when alarm output turns OFF when ON. System errors caused by frequent ON/OFF operation of alarm output can be pevented.

Default: 0.00pH / 0mV



9-5 Unit setting

You can set the temperature unit for your convenience. (°C, °F)

Default : °C

\*It is not supported in ORP mode.



9-6 Damping setting

Ignores small changes in the controller readings. If there is a problem in the output signal of the electrode under certain circumstances, only the amount of change over the set value is detected. Default: 0.00pH / 0mV



9-7 Offset setting

Increases or decreases the measured value by the set value.

It is used temporarily when the measured values show a certain difference or when it is difficult to immediately proceed with the calibration. Default :  $0.00 \mathrm{pH}$  /  $0 \mathrm{mV}$ 



9-8 Measurement value fixed setting(hold)

The measured value is fixed at the set value.

System errors can be prevented by fixing the measured values when cleaning or replacing electrodes, Default: Off



9-9 Automatic temperature compansation(ATC)

Compensates the measured value for the temperature measured by the temp sensor. Default: Off (ON in case of temperature compensation option)



9-10 Temperature measurement calibration

If the temperature measured through the temperature compensation electrode is different from the actual temperature, it is compensated.

\*It is not supported when automatic temperature compensation(ATC) is not used.



9-11 Communication address setting

Set the address of the controller for RS-485 communication.

Default: 01

\*A controller without communication specification is not supported.



9-12 Baudrate setting

Set the communication Baudrate.

Default: 9.6(9600bps)

\*A controller without communication specification is not supported.




9-13 Measurement mode setting

Change the controller to pH or ORP measurement mode.


Default: pH mode

## 9-3 Alarm setting(Relay)

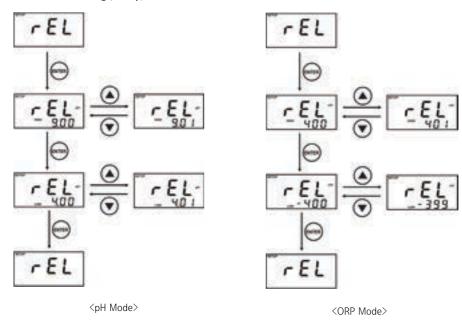


- ① rEL in setup mode is the alarm setting menu.
- ② When entering the setting screen, the currently set alarm value is displayed.
- ③ You can change the alarm setting value with the ▲,▼ keys. (Unit: 0.01pH / 1mV, Range: 0.00 ~ 14.00pH, -1999mV ~ +1999mV)
- ④ After setting the high alarm, you can set the lo alarm.
- ⑤ The high alarm value cannot be set lower than the low alarm value.
- ⑥ The low alarm value cannot be set higher than the high alarm value.
- The deadband setting value is reflected in the alarm setting value. (Refer to 9-4 Deadband setting) ex) When the deadband is set at 0.30pH and high alarm is set at 2.00pH, low alarm cannot be set above 1.70pH.
- Alarm ON condition
  - High alarm : High alarm setting value ≤ Measured value
  - Low alarm : Low alarm setting value ≥ Measured value
- (9) Alarm OFF condition
  - High alarm : High alarm setting value > Measured value
  - Low alarm : Low alarm setting value < Measured value
- \*For Deadband setting and its operation, please refer to "9-4 Deadband setting".

### 9-4 Deadband setting

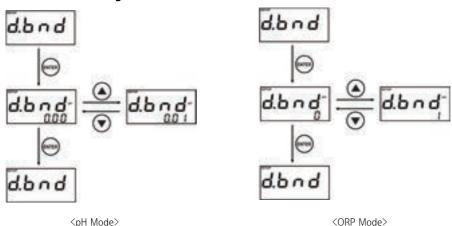


- ① d.bnd in setup mode is the deadband setting menu.
- ② When entering the setting screen, the currently set alarm value is displayed.
- ③ You can change the deadband setting value with the ▲,▼ keys. (Unit: 0.01pH / 1mV, Max: 1.00pH / 100mV)
- 4 Finish the setting by pressing ENTER key.
- (5) The alarm will occur as shown below example.
  - ex) When setting of 0.10pH
    - When setting value of high alarm is 8.00pH
      - : If measured value is 8.00pH or over, High alarm will occur, and if measured value become less than 7.90pH, High alarm will be off.
    - When setting value of low alarm is 6.00pH
      - : If measured value is less than 6.00pH, Low alarm will occur, and if measured value become 6.10pH or over, Low alarm will be off.
  - \*\*Deadband setting value can not be set within the difference range of high alarm and low alarm. (Refer to "9-3 Alarm setting")
    - ex) When 7.00pH of high alarm and 6.80pH of low alarm are set, 0.20pH or higher can not be set as deadband.

## 9-5 Unit setting

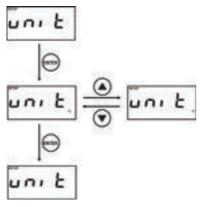


- ① unit in setup mode is the unit setting menu.
- ② When entering the setting screen, the currently set unit is displayed.
- ③ You can change the unit setting with the  $\blacktriangle, \blacktriangledown$  keys. (Two types of units are supported,  $^{\circ}C$  and  $^{\circ}F$ )
- ④ Finish the setting by pressing ENTER key.※It is not supported in ORP mode.

## 9-6 Damping setting

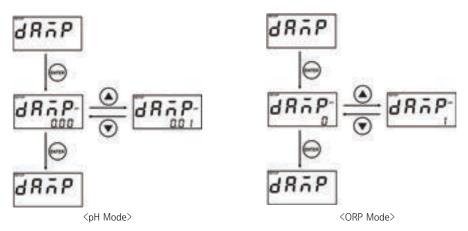


- ① dAnp in setup mode is the damping setting menu.
- ② When entering the setting screen, the currently set damping value is displayed.
- ③ You can change the damping setting value with the ▲,▼ keys. (Unit: 0.01pH / 1mV, Max: 1.00pH / 100mV)
- ④ Finish the setting by pressing ENTER key.

### 9-7 Offset setting

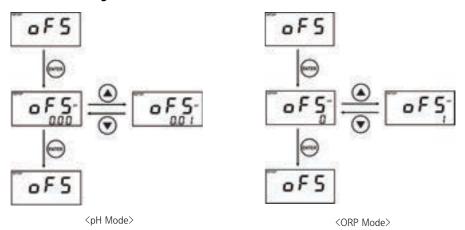

- ① oFS in setup mode is the offset setting menu.
- ② When entering the setting screen, the currently set offset value is displayed.
- ③ You can change the offset setting value with the  $\blacktriangle$ ,  $\blacktriangledown$  keys. (Unit: 0.01pH / 1mV, Range: -1.00 ~ 1.00pH / -100 ~ 100mV)
- 4 Finish the setting by pressing ENTER key.


## 9-8 Mesured value fixed setting

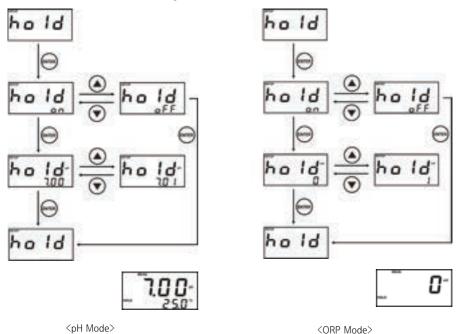

- ① Hold in setup mode is the measurement value fixed setting menu.
- ② Enter the setting screen and select whether to set the measurement value fixed.
- ③ You can change ON/OFF with ▲,▼ keys
- ④ When selecting off, the setting is immediately completed.
- (5) When selecting on, the value to set is displayed.
- ⑥ You can change the hold setting value with the ▲,▼ keys. (Unit: 0.10pH / 1mV, Range: 0.00~14.00pH / -1999 ~ +1999mV)
- Tinish the setting by pressing ENTER key.
- The measured value is displayed as the setting value and HOLD status is displayed.
  - If the hold setting value is higher than the setting value of HIGH Alarm or lower than the setting value of LOW Alarm, alarm will occur, but it will be not effected by Dead band.It is impossible to enter the calibration mode, when the measured value is hold state.

## 9-9 Automatic temperature compensation setting(ATC)


### / Manual temperature setting

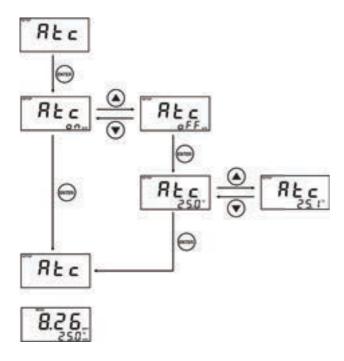

- ① ATC in setup mode is the Automatic temperature compensation(ATC) setting menu.
- ② Enter the setting screen and select whether to set the ATC.
- ③ You can change ON/OFF with ▲,▼ keys
- ④ When selecting on, the setting is immediately completed and ATC status is displayed in measurement mode.
- ⑤ When selecting off, set the temperature by manual.
- ⑤ You can change the temperature value with the ▲,▼ keys. (Unit: 0.1°C / Range: 0.0 ~ 100.0°C)
- Tinish the setting by pressing ENTER key.


\*It is not supported in ORP mode.

## 9-10 Temperature measurement calibration

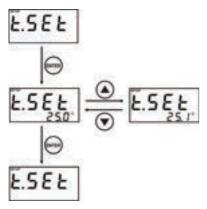


- ① t.SEt in setup mode is the temperature measurement calibration menu.
- ② When entering the setting screen, the currently measured temperature is displayed.
- ③ Change the measured temperature to the actual temperature with the  $\blacktriangle$ ,  $\blacktriangledown$  keys.
- $\ensuremath{\textcircled{4}}$  Finish the setting by pressing ENTER key.
  - \*It works only when automatic temperature compensation setting is on.
  - \*If the temperature sensor is not connected, it will not work.
  - \*It is not supported in ORP mode.

## 9-11 Communication address setting

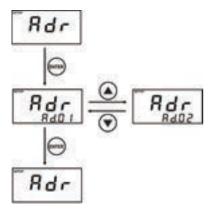


- ① Adr in setup mode is the communication(RS-485) address setting menu.
- ② When entering the setting screen, the currently set address is displayed.
- ③ You can change the address with the ▲,▼ keys. (Range: 1 ~ 32)
- ④ Finish the setting by pressing ENTER key.
- \*A controller without communication specification is not supported.

## 9-12 Baudrate setting

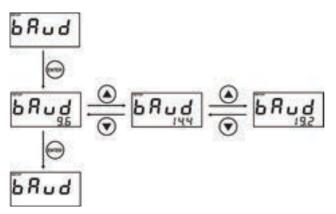

- ① bAud in setup mode is the communcation(RS-485) baudrate setting menu.
- ② When entering the setting screen, the currently set baudrate is displayed.
- ③ You can change the baudrate with the ▲,▼ keys. (9.6: 9600bps, 14.4: 14400bps, 19.2: 19200bps)
- 4 Finish the setting by pressing ENTER key.
- \*A controller without communication specification is not supported.

## 9-13 Measurement mode setting

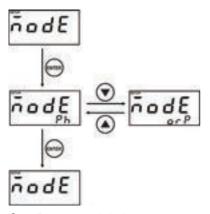

- $\ensuremath{\textcircled{1}}$   $\ensuremath{\overline{\text{n}}}$  odE in setup mode is the measurement mode setting menu.
- ② When entering the setting screen, the currently set measurement mode is displayed.
- ③ You can change the pH mode or ORP mode with the ▲,▼ keys.
- ④ Finish the setting by pressing ENTER key.
- \*If you change mode, all setting values will be initialized.

## 10 Communication Protocol

## 10-1 Communication Type

1)Channel: RS-485(Multi Drop)

2) Baudrate: 9,600 bps (Default), 14,400 bps, 19,200 bps

3)Transmission: Half-Duplex 4)Protocol: Modbus RTU

#### 10-2 Character Form

1)Character composition

• 0 Start bit

· 8 Data bit (LSB First)

No Parity bit1 Stop bit

#### 2)Bit Sequence

Start	Data (8bit)						Stop	
Bit	D0 D1 D2 D3 D4 D5 D6 D7						Bit	
0	Х							1

#### 10-3 Frame

1)Frame construction

• Each area of the message is called a Field and consists of four fields.

①Address field: 8bit ②Function Code field: 8bit ③Data field: N x 8bit

@CRC(Error Check)field : 16bit

#### 2)Frame division

- Frames are classified by a waiting time of at least 3.5 character time after transmission of the last character of the frame, and if a new character is received within 3.5 character time, it is judged as a continuation of the frame being transmitted.
- The frame string must be transmitted continuously, and if a waiting time of 1.5 Character time or more
  occurs between each character, it is judged as an incomplete message and the receive buffer is initialized.

3) Character time (Baud Rate: 9600bps)

1Character: 1.04ms3.5Character: 3.64ms

#### 10-4 Field

#### 1) Address field

- In the frame sent by the Master (PC), it is the address of the Slave (controller) to communicate with, The frame sent by the Slave is its own address.
- The address setting of the controller can be set in the Adr item of the menu function.

When entering the menu, Ad.01 (initial value) is displayed on the controller screen,

and addresses 1 to 31 can be changed with the ▲ and ▼ keys.

\*It must be saved with the ENTER key, and if there is no key operation for 20 seconds, the setting is terminated without saving.

• The address cannot be changed by any method other than controller operation.

#### 2) Functioin Code field

Select the type of function to request from the Slave. (Only two functions are supported.)

①Register read: 0x03 ②Register write: 0x06

- If the Master's request is normal, the same function code as the requested function code is returned.
- If the master's request is abnormal, an error response is made by setting the first bit of the requested function code to 1.

ex) Error respond to 0x03: 0x83 Error respond to 0x06: 0x86

#### 3) Data field

- It consists of the address, number, and data of the register, and the composition of the data field varies depending on the requested function code and response type.
  - ①Register read request: Register address to start reading, number of registers to read

②Register read respond: Number of byte, data

③Register write request, respond: Register address to write, data value to write

④Error respond : Exception Code

All data is composed of 2Byte (16bit) signed Integer type and has a value of '-32768 ~ 32767'.

- In case of negative number, it is treated as a complement and displayed.
   (Refer to "7.Data Conversion".)
- All data are processed as integers without distinction of decimal point and transmitted. For information on decimal point, refer to "10-7. Data conversion" to convert data. (Data of 50 and 5.0 are treated as 50 and transmitted in the form of 0x0032.)
- Example of data construction
- ① 14.00(Decimal)

Data	Data
(High)	(Low)
0x05	0x78

#### 2 -20 (Decimal)

Data	Data
(High)	(Low)
0xFF	0xEC

#### 4)CRC(Error Check) field

- The CRC field consists of 2 bytes, and the transmission order is the lower 1 byte and the upper 1 byte.
- CRC check method is CRC16 (Modbus).
- For how to create CRC16, refer to "10-10.CRC16 creation method".

## 10-5 Register Map

Register Address	Contents	Write / Read	Va	lue	Report	
			0x0101		pH measurement mode	
			0x0	102	ORP measurement mode	
			0x0	103	RC measurement mode	
			0x0	104	DO measurement mode	
0x0001	Controllor Status	Dood	0x0	105	EC measurement mode	
000001	Controller Status	Read	0x0	110	Calibration mode entry state	
			0x0	120	Setup mode entry state	
			0x0	191	ERROR1 occur	
			0x0	192	ERROR2 occur	
			0x0	193	ERROR3 occur	
			0x0	200	No alarms occurred	
0x0002	Alarm Status	Read	0x0	201	High alarm occur	
			0x0202		Low alarm occur	
0x0003	Meas Data	Read			Measured concentration value	
0x0004	Temp Meas Data	Read			Measured temp. value	
0x0005	High Alarm Data	Write / Read			High alarm set value	
0x0006	Low Alarm Data	Write / Read			Low alarm set value	
				0x80	Main unit mV	
				0x40	Main unit pH	
			High	0x20	Main unit %	
			Byte	0x10	Main unit mg/L	
0x0007	Unit	Read		0x08	Main unit ppm	
				0x04	Main unit mS	
				0x80	Sub unit ℃	
			Low Byte	0x40	Sub unit °F	
			5,00	0x20	Sub unit %	
0x0008	Dead Band	Write / Read			Dead Band set value	
0x0009	Offset	Write / Read			Offset set value	
0x000A	Damping	Write / Read			Damping set value	

## 10-6 Write data input range

1)pH

High Alarm	Low Alarm	Dead Band	Offset	Damping
(0x0005)	(0x0006)	(0x0008)	(0x0009)	(0x000A)
0 ~ 14.00	0 ~ 14.00	0 ~ 1.00	-1.00 ~ 1.00	1 ~ 1.00
0x0000	0x0000	0x0000	0xFF9C	0x0001
~ 0x0578	~ 0x0578	~ 0x0064	~ 0x0064	~ 0x0064

## 2)ORP

High Alarm	Low Alarm	Dead Band	Offset	Damping
(0x0005)	(0x0006)	(0x0008)	(0x0009)	(0x000A)
-1999 ~ 1999	-1999 ~ 1999	0 ~ 100	-100 ~ 100	1 ~ 100
0xF831	0xF831	0x0000	0xFF9C	0x0001
~ 0x07CF	~ 0x07CF	~ 0x0064	~ 0x0064	~ 0x0064

## 3)RC

High Alarm	Low Alarm	Dead Band	Offset	Damping
(0x0005)	(0x0006)	(0x0008)	(0x0009)	(0x000A)
0 ~ 4.00	0 ~ 4.00	0 ~ 1.00	-1.00 ~ 1.00	0 ~ 1.00
0x0000	0x0000	0x0000	0xFF9C	0x0000
~ 0x0190	~ 0x0190	~ 0x0064	~ 0x0064	~ 0x0064

## 4)DO

High Alarm	Low Alarm	Dead Band	Offset	Damping
(0x0005)	(0x0006)	(0x0008)	(0x0009)	(0x000A)
0 ~ 20.00	0 ~ 20.00	0 ~ 1.00	-1.00 ~ 1.00	0 ~ 1.00
0x0000	0x0000	0x0000	0xFF9C	0x0000
~ 0x07D0	~ 0x07D0	~ 0x0064	~ 0x0064	~ 0x0064

## 5)EC

High Alarm	Low Alarm	Dead Band	Offset	Damping
(0×0005)	(0x0006)	(0x0008)	(0x0009)	(0x000A)
0 ~ 20.00	0 ~ 20.00	0 ~ 1.00	-1.00 ~ 1.00	0 ~ 1.00
0×0000	0x0000	0x0000	0xFF9C	0x0000
~ 0×07D0	~ 0x07D0	~ 0x0064	~ 0x0064	~ 0x0064

## 10-7 Data transfomation

### 1)Dot Position

	рН	ORP	RC	D	DO	
	рп	OKP	KC.	ppm	%	EC
Meas Data	2	0	2	2	1	2
(0x0003)	2	Ů	2	2	'	2
Temp Meas Data	1	None	None		1	1
(0x0004)	'	None	None	l		'
High Alarm Data	2	0	2	2	1	2
(0x0005)	2	U	2	2		2
Low Alarm Data	2	0	2	2	1	2
(0x0006)	2	U	2	2	ı	2
Dead Band	1	0	1		1	1
(0x0007)	'	U	ı		ı	'
Offset	1	0	1		1	1
(0x0008)	'	U	ı	I		'
Damping	1	0	1		1	1
(0x0009)		U			I	l l
Temp Offset	1	0	None		1	1
(0x000A)		U	None		ı	'

### 2)Negative Number

• 65536 + Negative Number = Data

ex) -50

65536 + (-50) = 65486 (0xFFCE)

### 10-8 Request and response format

#### 1)Read request

- Read consecutive registers of the requested quantity
- Fuction code 0x03
- Start address of register to read -1
- · The number of registers to read
- Ex) Request the register value of 0x0003 ~ 0x0007 of Controller 1

Slave Address	Function Code	Starting Address (High)	Starting Address (Low)	No. Of Register (High)	No. Of Register (Low)	CRC (Low)	CRC (High)
0x01	0x03	0x00	0x02	0x00	0x05	0x24	0x09

#### 2) Read response (normal response)

- Number of data bytes
- · Data in the requested register
- Ex) Response to the above read request example

pH: 11.40, Temp:25.0, High Alarm: 9.00, Low Alarm: 4.00, Main unit: pH, Sub unit:  $^{\circ}\mathrm{C}$ 

Slave Address	Function Code	Byte Count	Value (High)	Value (Low)	Value (High)	Value (Low)	Value (High)
0x01	0x03	0x0A	0x04	0x74	0x00	0xFA	0x03
Value (Low)	Value (High)	Value (Low)	Value (High)	Value (Low)	CRC (Low)	CRC (High)	
0x84	0x01	0×90	0x40	0×80	0xA9	0xF2	

#### 3)Write request

- · Write a value to one register
- Function code 0x06
- Address of register to be written -1
- Ex) Write the value of 0x0320 (Relay High: 8.00) to the register of 0x0005 of controller address 1.

A	Slave Address	Function Code	Starting Address (High)	Starting Address (Low)	Value (High)	Value (Low)	CRC (Low)	CRC (High)
	0x01	0x06	0x00	0x06	0x03	0x20	0x68	0xE3

#### 4)Write respond

· Respond with the same data as the write request

### 10-9 Error respond

- 1) Function Code
  - Response by setting the first bit of the requested function code to 1
  - Read error 0x83
  - Write error 0x86

#### 2)Exception Code

- · Information on what kind of error occurred
- 0x01: Use of unsupported function code
- 0x02: Register address is invalid
- 0x03: Invalid data entry

#### 10-10 How to create CRC16

```
1)Load 0xFFFF into 16Bit register (CRC register).
```


- 2)XOR the lower byte and data (8Bit) of CRC register and save the result in CRC register.
- 3) Shift the CRC register to the right (LSB direction) by 1 bit and check the LSB.
- 4) If LSB is 0, repeat step 3.
  - If LSB is 1, XOR the CRC register and 0xA001 and store the result in the CRC register.
- 5) Repeat steps 3 and 4 8 times.
- 6) Repeat items 1 to 5 as many as the number of bytes in the frame except for CRC 2Byte.

### 10-11 CRC16 Program example

```
crc16 check(num)
{
     int I, j;
     uint crc_sum=0xffff, carry=0;
     for(i=0; i<num; i++)
          crc_sum = plc_rbuffer[i] ^ crc_sum;
          for( j=0; j<8; j++)
              carry = crc sum & 0x01;
              crc_sum = crc_sum >> 1;
              if(carry == 1) crc_sum = crc_sum ^ 0xA001;
         }
     sum[0] = crc_sum & 0xff;
     sum[1] = crc sum >> 8;
     if(sum[0] == plc rbuffer[num]) return(true);
     else return(false);
}
```


## 11 System Diagram

### 11-1 Electrode holder type

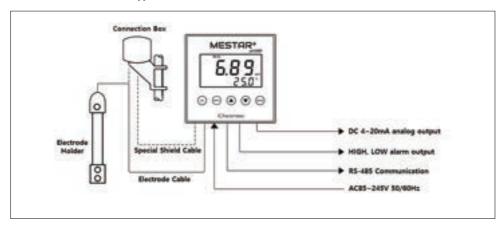

- \*\*The electrode holder is provided as components when purchasing a standard set.
- \*As the number of connections using the connection box increases, the signal sensitivity of the electrode may decrease. Use the connection box to a minimum and install the special shield cable within a maximum length of 100m.

## 11-2 Sampling holder type

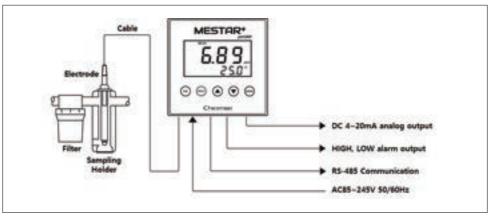


- \*The sampling holder is sold separatly.
- \*\* When purchasing the sampling holder, please refer to the separate sampling holder instruction manual.


## 12 Handling of Components

\*This manual describes only the handling for the standard set components.

#### 12-1 Wiring of connection box

- ① Be careful not to change the wiring, since the connection of the electrode and the connecting cable must match each other at the terminals inside the connection box.
- ② General standard connection box has only G(M) & R terminals, so connect G(M) & R terminal on both sides of the acrylic plate to the same poles each other when wiring.

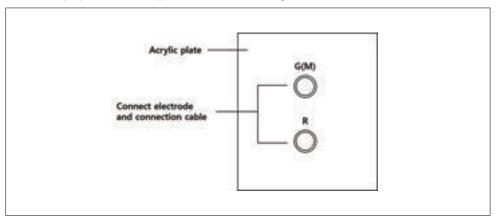


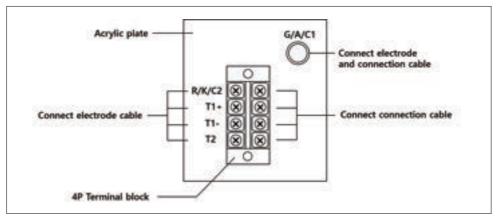

## ▲ Caution

- Do not istrall controller in the heavy moist, dust or vibration place. The connection may be poor.
- Do not install this connection box at the place where corrosive gas is generated.
- Turn off power before repair & maintenance.
   It may cause a damage of controller by static electricity.

## 12-2 Termination method of connection cable(for Temp. compensation)

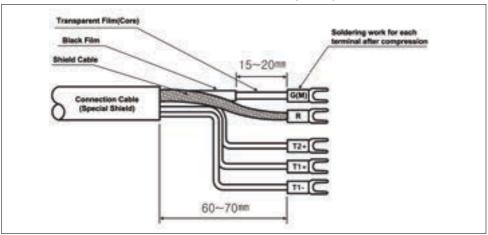

- ① Remove the external film & the internal black film as beside figure and solder the Y terminal after compressing the Y terminal(1.5-3Y) to the cable.
- ② Wrap it with tube or tape after soldering. Specially, wrap shield cable of R terminal with shrink tube( $\Phi$ 2.0) or tape in order to prevent its exposure.
- ③ When moving external film & internal black film, be careful that transparent film (G(M)) don't be damaged and, if the transparent film is damaged, rework after cutting the damaged part.

Terminal name	G(M)	R	Т2	T1	T1
Cable color	Transparent	Shield	Whtie	Red	Yellow

## (A Caution)


• Remove black film as above figure certainly.

If not removed, G/A/C1 terminal and R/K/C2 terminal will be short state, can not measure it since the measured value will be fixed around pH7 in pH measuring and the measured value will be fixed around 0mV in ORP measuring.


#### 12-3 Handing method of electrode holder

- ① The electrode holder is used for measuring pH value of liquid in the open tank. Electrode holder is plastic pipe and functions as container which can fill in KCI liquid.

  KCI liquid can be easily filled from top of electrode holder and sufficient KCI liquid can be stored inside because whole pipe functions as container.
- ② In case of replenish-free electrode, there is no need to refill KCI liquid and handling method is similar to other electrodes.

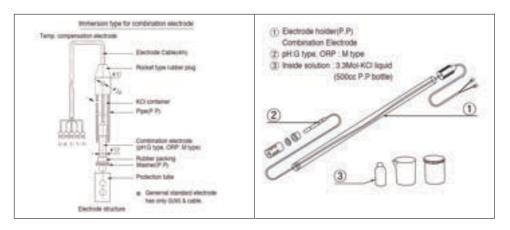

#### 12-4 Installation method of electrode & electrode holder

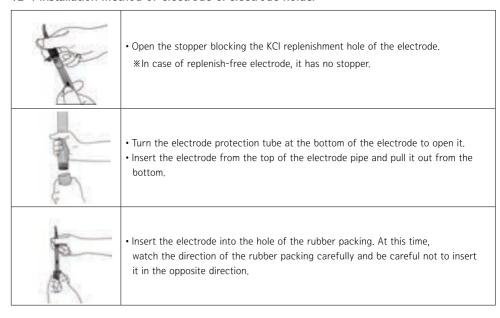

-	Insert the rubber packing with the electrode inserted at the bottom of the electrode pipe.
	Put a washer (P.P) on the rubber packing and assemble the protective tube to fix it.  When assembling the protective tube, tighten it tightly so that the fluid inside the pipe does not flow out.  When inserting electrode cable into electrode holder, don't make it tight but rather loose. It is more convenient when refilling internal solution & replacing electrode.
	Dilute the KCl powder well in 500 cc of distilled water, put it in a beaker, and inject it into the upper part of the electrode.  *Dilute 123 g of KCl powder in 500 cc distilled water to obtain 3.3 mol of KCl solution.  *Replenishment-free electrodes do not require injection of KCl solution.
	After the KCl solution is injected, the top of the electrode is closed with a rubber stopper to prevent foreign substances from penetrating into the electrode.

## **▲** Caution

• Be careful not to apply excessive force when handling the electrode, if the glass electrode is broken by excessive force, it may cause injury.

# 13 Cause & Solution of Problem

Item	Problem	Number of Cause & Solution
А	E.01 on screen (Electronic circuit board is not connected)	1, 2
В	E.02 on screen (Electrode is not calibrated)	3, 4
С	E.03 on screen (Electrode signal error)	3, 4, 5
D	Reading on screen is not changed	3, 4, 5, 6, 7
E	Measuring is difficult reading is not steady	3, 5, 6, 7
F	There is a big difference from the temperature indication	8,9

No.	Cause	Solution
1	Faulty circuit board connection	Repair the controller
2	Damaged circuit board	Repair the controller
3	Damaged electrodes & Electrode's aging	Exchange electorde
4	Shortage of electrode solution	Supplement of internal liquid
5	Fault of liquid to be measured	Connecting terminal after removing obstacle
6	Poor quality of the measuring liquid	Exchange the measuring liquid
7	The fluid velocity of liquid to be measured is not steady	Makes the fluid velocity steady
8	Temperature sensor calibration required	Performs temperature measurement value correction function of set item
9	Faulty or bad temperature compensation circuit	Temperature compensation PCB replacement

# 14 Warranty

## ▲ Caution

- If the product is reconstructed arbitrarily or the undesignated parts are used into the product,
   CHEONSEI will not warrant and CHEONSEI is not responsible for any expense caused by accident or trouble
- ① The warranty period of the product is 1 year from the date of sale.
- ② During the warranty period, we can repair or replace free of charge in case of failure or damage due to problems in our design and manufacturing.
- ③Repair or replacement in the event of failure or damage due to the following causes will be charged regardless of the warranty period.
  - 1) Failure and damage after the warranty period has expired
  - 2) Problems in use due to careless handling
  - 3) Failure and damage caused by using parts other than those specified by our company or by arbitrarily remodeling
  - 4) Failure and damage caused by repairs or remodeling other than our company or our designated contractor
  - 5) Failure and damage due to force majeure such as fire or natural disaster


## 15 Repair Service

## **▲** Caution

- When the product is sent to factory for repair service, do not damage during transport.

  Also, please make sure that bolts and other components are securely fastened in order not to loss it.
- ① Contact to CHEONSEI or local agent as shown on back of the manual, if you have any problem or questions.
- ② If you want to repair, please inform the following.
  - 1) Model Name & manufacture number written in name plate
  - 2) Used period, using condition & state
- ③ If warranty period is over, it may charge according to repair part. Please contact with sales agent for more information.
- 4 Minimum retention period of parts for repair is 5 years from the date of production.


## 16 Controller Wiring

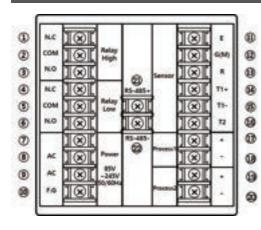


- 1) High Alarm N.C(Normal Close)
- 2) High Alarm COM(Common)
- 3) High Alarm N.O(Normal Open)
- 4) Low Alarm N.C(Normal Close)
- 5) Low Alarm COM(Common)
- 6) Low Alarm N.O(Normal Open)
- 7) None(Don't use)
- 8) AC Power input
- 9) AC Power input
- 10) EG(Frame Ground)
- 11) Earth to measured liquid
- 12) Electrode G(M)
- 13) Electrode R
- 14) Flectrode T1+
- 15) Flectrode T1-
- 16) Electrode T2
- 10) Electrode 12
- 17) pH/ORP Analog output +
- 18) pH/ORP Analog output -
- 19) Temp. Analog output +
- 20) Temp. Analog output -
- 21) RS-485 Communication +
- 22) RS-485 Communication -


## 17 Controller Dimension

#### Front view

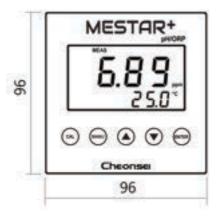


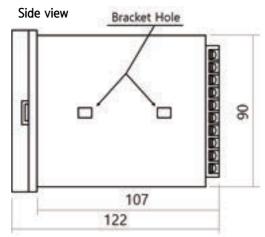

### Rear view

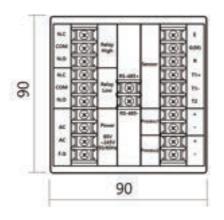


### **Panel Cutout**

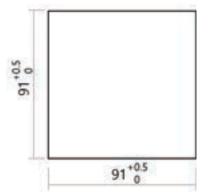


## 18 Controller Installation

#### 18-1 Panel bracket fixed

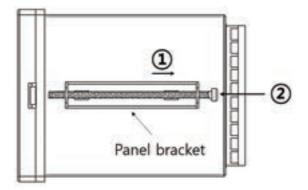

- 1)Insert the panel bracket into the panel bracket mounting holes on both sides of the controller and insert in the direction of ①.
- 2) Tighten the support bolt in the direction of ② to fix it.

## 18-2 Installation height

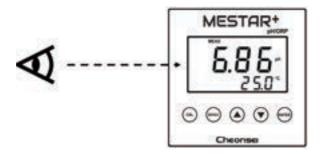

## ▲ Caution

- Install the controller screen so that it is level with the eye level.
- The controller screen is an LCD type, so if you do not look directly at the screen, visibility is reduced.

CSME-N1-02 2023.05



40, ANSANTECOM-GIL, SANGNOK-GU, ANSAN-SI, GYEONGGI-DO, REPUBLIC OF KOREA

Phone: +82-31-508-1003 Fax: +82-31-419-3223

E-mail: cheonsei@cheonsei.co.kr Homepage: http://www.cheonsei.co.kr